

Product Installation Guidelines

Document No.: 001.00.30.23 Version 1, 4 November 2022, Page 1 of 4

Vandal Resistant CP-BS J/V Wall Top Assembly

PRODUCT CODES

- 49913
- 49916





SPECIFICATIONS

- Chrome plate finish for easy cleaning and durability.
- Simple servicing and readily available parts.
- Tough vandal resistant handle that has a unique locking system.
- Quality controlled. Every tap is tested.

IMPORTANT: All taps are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

TECHNICAL DATA			
Inlet		⁵⁄8" BSP - Male	
Outlet		N/A	
Headwork		Jumper Valve	
Working Pressure Range (kPa)	Min	50	
	Max	500	
Working Temperature Range (°C)	Min	5	
	Max	60	
Nominal Flow Rate (LPM)		N/A	
Construction		Brass	
Finish		Chrome	
NOTE: Galvin Engineering continually strive to improve their products. Specifications may change without			

NOTE: Galvin Engineering continually strive to improve their products. Specifications may change without notice.


TOOLS REQUIRED

- Spanner or adjustable crescent
- Key Spanner (supplied)

PRE-INSTALLATION


DIMENSIONS

Note: Before installation, all lines must be flushed. We recommend that a line strainer be installed prior to drinking taps to eliminate any foreign material.

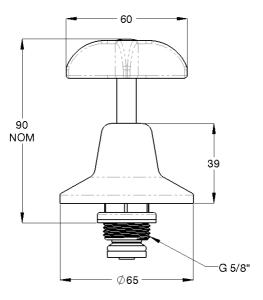


INSTALLATION

IMPORTANT: Galvin Specialised products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

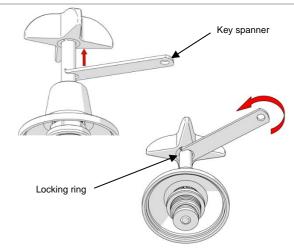


1. Remove locking ring

 Using supplied key spanner, unscrew the handle assembly locking ring as shown.

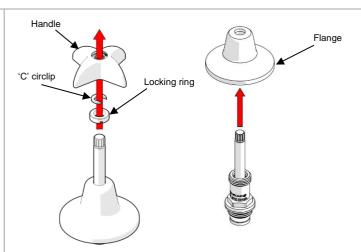


2. Disassemble

- Remove the handle, then 'C' circlip and locking ring.
- Unscrew the flange.

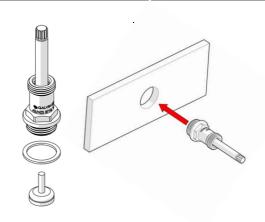


3. Fit top assembly

 Fit top assembly ensuring the tap washer and jumper valve is in place.

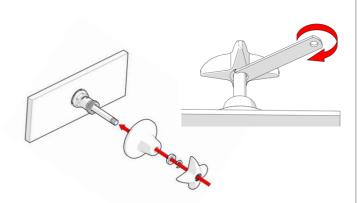

4. Re-assemble

 Fit the assembly components by reversing steps 2 & 1 as shown.

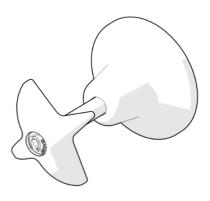

5. Testing

Once the assembly has been installed, test for leaks and correct operation.

TROUBLESHOOTING			
PROBLEM	CAUSE	RECTIFICATION	
Water is not flowing from tap	Water supply is turned off	Turn on water supply	
Assembly is leaking	The supplied tap washer wasn't installed.	Repeat installation steps ensuring the tap washer is correctly in place	
Tap is leaking	Worn jumper valve.	Remove the top assembly and replace the jumper valve	

WARRANTY

The warranty set forth herein is given expressly and is the only warranty given by the Galvin Engineering Pty Ltd. With respect to the product, Galvin Engineering Pty Ltd makes no other warranties, express or implied. Galvin Engineering Pty. Ltd. hereby specifically disclaims all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

Galvin Engineering Pty Ltd products are covered under our manufacturer's warranty available for download from www.galvinengineering.com.au Galvin Engineering Pty Ltd expressly warrants that the product is free from operational defects in workmanship and materials for the warranty period as shown on the schedule in the manufacturer's warranty. During the warranty period, Galvin Engineering will replace or repair any defective products manufactured by Galvin Engineering without charge, so long as the terms of the Manufacturer's warranty are complied with.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and Galvin Engineering Pty Ltd shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labour charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances over which Galvin Engineering has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.

Within Australia: 1300 514 074 Outside Australia: P: +61 (0)8 9338 2344

F: +61 (0)8 9338 2340 sales@galvinengineering.co

sales@galvinengineering.com.au www.galvinengineering.com.au

ABN: 78 008 719 382

PERTH I SYDNEY I MELBOURNE I BRISBANE I ADELAIDE



