

**Product Installation Guideline** 

Version 2, 18 July 2017, Page 1 of 4

# CliniLever® Healthcare Tapware

## PRODUCT CODES:

- TCWMC80PC
- TCWMJ80PC







## **SPECIFICATIONS**

- The CliniLever® product range is primarily used for hand washing applications in hospitals, aged care facilities, schools and in-home care.
- CliniLever® products provide state of the art features to comply with the latest healthcare guidelines.
- Easy operation dual levers for on/off, hot and cold temperature control simplify hand washing procedures.
- Our highly sought after lever handle design is easily operated with elbows or wrists to avoid hand contact.
- The main body is made of solid dezincification resistant (DR) brass rod, with a DR brass fixed outlet.
- Quick action SBA's includes brass jumper valve / ceramic cartridge component, with red and blue indicator button on 80mm lever action handles.

**IMPORTANT**: All CliniLever<sup>®</sup> healthcare taps are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

TECHNICAL DATA				
Inlet			½" BSP - Female	
Outlet			³¼" BSP - Male	
Headwork			Jumper Valve/Ceramic Disc	
Working Pressure Range (kPa)		Min	50	
		Max	500	
Working Temperature Range (°C)	Jumper Valve/Ceramic	Min	5	
	Jumper Valve	Max	80	
	Ceramic	Max	90	
Nominal Flow Rate (LPM)			N/A	
Finish			Chrome	
			· · · · · · · · · · · · · · · · · · ·	

**NOTE:** Galvin Specialised continually strive to improve their products. Specifications may change without notice.

## **TOOLS REQUIRED**

- Power drill
- Spanner
- Hex key
- Thread tape

© Galvin Engineering Pty Ltd




## **PRE-INSTALLATION - MOUNTING DETAILS**

## **Wall Spud**


- Wall spuds must be 15BSP MI and protrude from the finished wall by no more than 15mm

Note: In some situations a male thread connection on the tap may be more suited. If so, please contact Galvin Specialised on 1300 514 074.

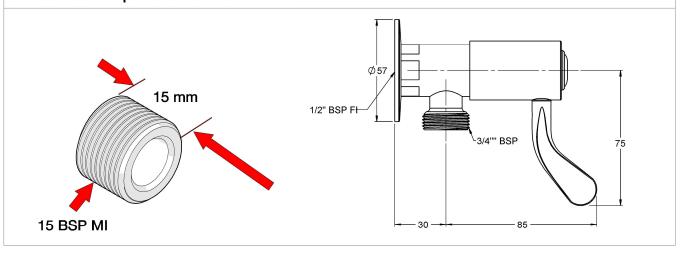


## **INSTALLATION**

**IMPORTANT:** Galvin Specialised products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

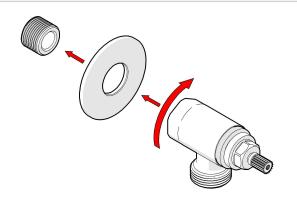

## 1. Fit washing machine body

- Fit the washing machine body assembly with the wall flange to the spud and fasten with a spanner.
- We recommend using thread tape or equivalent to ensure the connection does not leak
- DO NOT tighten the body by using the top assembly.

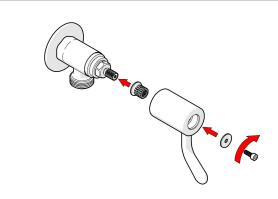


## 2. Fit handle


- Ensure the spindle is in the closed position and firmly press the CliniLever® lever handle onto the spindle in the desired orientation.
- Check CliniLever® lever handles for operation.
   It should turn freely for a full ¼ turn.
- Secure the handle in position using the supplied washer and stainless steel cap screw.



## **Product Installation Guideline**

Version 2, 18 July 2017, Page **3** of **4** 

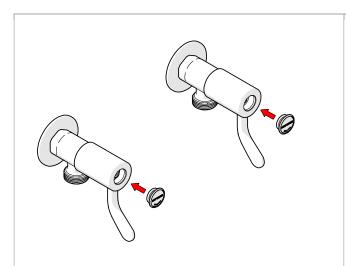

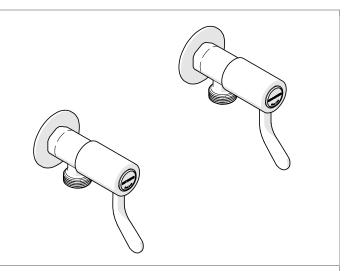

## 3. Fit water temperature indicator

- Once CliniLever® lever handle is secure, fit the water temperature indicator.
- Ensure the set is installed with hot and cold in the correct location.

## 4. Testing

 Once temperature indicator is fitted, check the operation of the unit and inspect for any leaks.

TROUBLESHOOTING			
PROBLEM	CAUSE	RECTIFICATION	
Taps are dripping water	Jumper valves are worn or damaged	Replace jumper valve	
	Ceramic discs are worn or damaged	Remove and inspect SBA. Remove debris and/or replace SBA if damaged.	
	Tap seat is damaged	Refurbish tap seat using a reseating tool.	
Water is leaking from spindle	O-ring on jumper valve spindle is damaged or worn	Replace o-ring	
Water is not flowing from tap	Water is turned off	Turn water on	
	Aerator or flow regulator is blocked by debris	Remove aerator and/or flow regulator from tap and remove debris. Install an inline strainer.	
Spindle is difficult to turn (jumper valve)	Build up of scale on spindle, spindle worn or o-ring has been damaged	Remove jumper valve, clean and regrease. Replace o-ring. Complete SBA may need to be replaced.	
Handle is loose	Screw has come loose	Tighten handle screw	
Flange does not screw down onto basin/sink surface	Tap bodies are set too far out	Re-position tap bodies and breach piece	



## **Product Installation Guideline**

Version 2. 18 July 2017. Page 4 of 4

#### **SERVICE AND MAINTENANCE**

#### JUMPER VALVE TAPWARE

- 1. Turn off the water supply and turn on the tap handle to drain water from the bodies.
- Remove the temperature indicator from the handle.
- 3. Remove the handle from the tap.
- 4. Unscrew the top assembly from the body.
- Check the o-ring on the spindle and the jumper valve for wear and damage. Replace if required.
- 6. Clean the spindle and body of debris.
- 7. Place a new o-ring (if required) onto the spindle and re-grease with potable water approved grease.
- 8. Re-assemble top assembly. Follow the product installation guidelines for the relevant product to re-assembly method.

#### CERAMIC CARTRIDGE TAPWARE

- 1. Turn off the water supply and turn on the tap handle to drain water from the bodies.
- 2. Remove the temperature indicator from the handle.
- 3. Remove the handle from the tap.
- 4. Unscrew the ceramic head part from the body.
- 5. Check the o-ring on the ceramic head part for wear and damage. Replace if required.
- 6. Clean the head part and the body of any debris.
- 7. Replace the cartridge and hand tighten back into the body.
- 8. Follow the product installation guidelines for the relevant product to re-assemble.

## **WARRANTY**

The warranty set forth herein is given expressly and is the only warranty given by the Galvin Engineering Pty Ltd. With respect to the product, Galvin Engineering Pty Ltd makes no other warranties, express or implied. Galvin Engineering Pty. Ltd. hereby specifically disclaims all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

Galvin Engineering Pty Ltd products are covered under our manufacturer's warranty available for download from www.galvinengineering.com.au Galvin Engineering Pty Ltd expressly warrants that the product is free from operational defects in workmanship and materials for the warranty period as shown on the schedule in the manufacturer's warranty. During the warranty period, Galvin Engineering will replace or repair any defective products manufactured by Galvin Engineering without charge, so long as the terms of the Manufacturer's warranty are complied with.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and Galvin Engineering Pty Ltd shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labour charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances over which Galvin Engineering has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.

