

Product Installation Guidelines

Version 2, 8th November 2022, Page **1** of 4

Ezy-Drink[®] Lead Safe[™] Remote Push Button Drinking Tap

PRODUCT CODES:

- 170.81.13.01







SPECIFICATIONS

- Drinking taps are designed to operate at full mains pressure.
- The rubber mouthguard is resistant to fungal and bacterial attack and has a high resistance to sunlight.
- Adjustable built-in flow restrictor.
- Made from Lead Safe™ DR brass

IMPORTANT: All Ezy-Drink® remote bubbler taps are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

As 'lead free' is not currently defined by low in Australia and New Zealand, we have based our definition of Lead Safe™ on the requirements of s1417 of the USA's Safe Drinking Water Act (SDWA) and the relevant US standards NSF61 / NSF372. The SDWA defines 'lead free' as "not more than a weighted average of 0.25% lead when used with respect to the wetted surface of pipes, pipe fittings, plumbing fittings and fixtures".

TECHNICAL DATA			
Inlet		½" BSP - Female	
Outlet		Rubber mouthguard	
Headwork		Push Button	
Working Pressure Range (kPa)	Min	50	
	Max	500	
Working Temperature Range (°C)	Min	5	
	Max	60	
Nominal Flow Rate (LPM)		1.7	
Finish		Chrome	

NOTE: Galvin Specialised continually strive to improve their products. Specifications may change without notice.

TOOLS REQUIRED


- Power drill
- Spanner or adjustable crescent
- Screw driver
- 2mm hex key (provided)

PRE-INSTALLATION - MOUNTING DETAILS

 If the mounting holes do not already exist, mark out and drill the holes in the bench/trough, as shown in roughin dimensions.


Note: Supplied flexi hose length is 225mm long. Maximum distance between outlet and push button is 180mm.

Note: Before installation, all lines must be flushed. We recommend that a line strainer be installed prior to drinking taps to eliminate any foreign material.

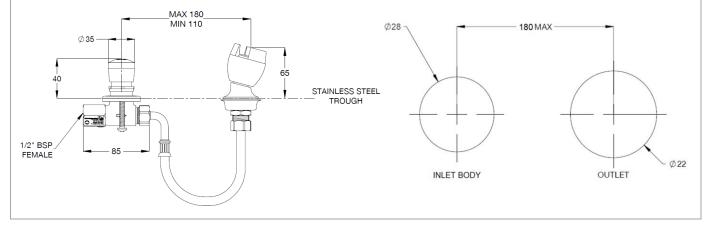


INSTALLATION

IMPORTANT: Galvin Specialised products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

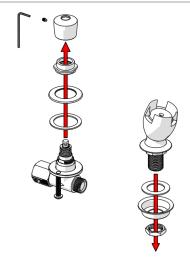


1. Disassemble Handle and Mouthguard Outlet

- Remove the push button and dress flange from the inlet body.
- Do not remove the whole top assembly
- Remove back nut and cup washer from the mouthguard outlet assembly

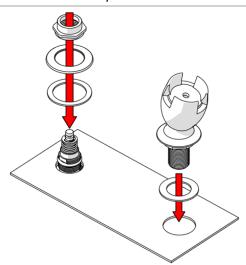


2. Fit Inlet Body & Mouthguard Outlet

- Ensure the sealing rubber washers are placed underneath the inlet body and mouthguard outlet.
- Fit the inlet body and mouthguard outlet into the trough.
- Fit washer, flange & locknut onto inlet body and hand tighten.

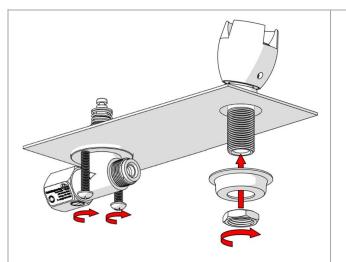


3. Secure Inlet Body and Mouthguard Outlet

- Tighten the screws on the inlet body as shown.
 Do not overtighten.
- Secure the mouthguard outlet underneath with the supplied cup washer and back nut.

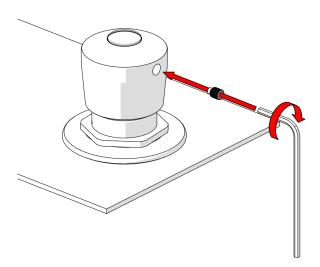


4. Fit handle

- Position and fit the handle and grub screw as shown.
- Tighten firmly using the supplied hex key.

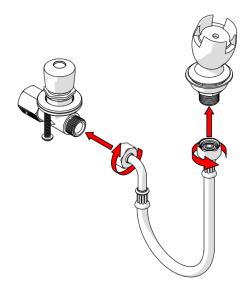

5. Fit Flexi-hose

 Fit flexi-hose to mouthguard outlet and inlet body as shown.

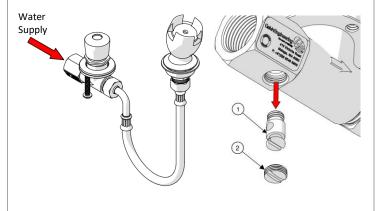

6. Testing

- Once the drinking tap has been installed and tested for leaks, the water height may be adjusted to suit the available pressure.
- To adjust water flow
 - 1. Remove the blanking screw ②.
 - 2. Adjust the water height by turning the regulator screw \bigcirc .
 - 3. Once desired height has been achieved, replace blanking screw.

Note: The full range from minimum flow to maximum flow is only $\mbox{\ensuremath{\%}}\xspace$ turn.

TROUBLESHOOTING		
PROBLEM	CAUSE	RECTIFICATION
Inconsistent flow	Blocked top assembly	Remove top assembly and clean
Water is not flowing from tap	Water is turned off	Turn on water
	Blocked flow regulating screw	Remove flow regulating screw and clean
Continuous flow	Top assembly loose or internally obstructed or damaged	Remove top assembly, clean with water and re-grease spindle if required
Rate of flow inadequate	The flow regulating screw may not be adjusted correctly	Remove blanking screw and adjust flow regulating screw as described above
Button hard to press	The mains pressure may be too great	Reduce to below 500kPa (70PSI). Regrease spindle if required

WARRANTY

The warranty set forth herein is given expressly and is the only warranty given by the Galvin Engineering Pty Ltd. With respect to the product, Galvin Engineering Pty Ltd makes no other warranties, express or implied. Galvin Engineering Pty. Ltd. hereby specifically disclaims all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

Galvin Engineering Pty Ltd products are covered under our manufacturer's warranty available for download from www.galvinengineering.com.au Galvin Engineering Pty Ltd expressly warrants that the product is free from operational defects in workmanship and materials for the warranty period as shown on the schedule in the manufacturer's warranty. During the warranty period, Galvin Engineering will replace or repair any defective products manufactured by Galvin Engineering without charge, so long as the terms of the Manufacturer's warranty are complied with.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and Galvin Engineering Pty Ltd shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labour charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances over which Galvin Engineering has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.

Within Australia: 1300 514 074 Outside Australia: P: +61 (0)8 9338 2344

F: +61 (0)8 9338 2340

sales@galvinengineering.com.au www.galvinengineering.com.au

ABN: 78 008 719 382

PERTH I SYDNEY I MELBOURNE I BRISBANE I ADELAIDE



