

Ezy-Drink[®] CP-BS Lead Safe[™] Jug Filler Replacement Gooseneck Spout

PRODUCT CODES:

- 170.94.40.00



SPECIFICATIONS

- Spare parts kit for Ezy-Drink[®] Jug Filler Tap
- Lead Safe[™] Brass construction

IMPORTANT: All Ezy-Drink[®] Jug Filler taps are tested in accordance with AS/NZS 3718 and leave our premises in good working order.

As 'lead free' is not currently defined by law in Australia and New Zealand, we have based our definition of Lead Safe[™] on the requirements of s1417 of the USA's Safe Drinking Water Act (SDWA) and the relevant US standards NSF61 / NSF372. The SDWA defines 'lead free' as "not more than a weighted average of 0.25% lead when used with respect to the wetted surface of pipes, pipe fittings, plumbing fittings and fixtures".

TECHNICAL DATA

Working Pressure Range (kPa)	Min	50
	Max	500
Working Temperature Range (°C)	Min	5
	Max	60
Nominal Flow Rate (LPM)		N/A
Construction		Brass
Finish		Chrome

NOTE: Galvin Specialised continually strive to improve their products. Specifications may change without notice.

TOOLS REQUIRED


- Hex Key






INSTALLATION

IMPORTANT: Galvin Specialised products must be installed in accordance with these installation instructions and in accordance with AS/NZS 3500, the PCA and your local regulatory requirements. Water and/or electrical supply conditions must also comply to the applicable national and/or state standards. Failing to comply with these provisions shall void the product warranty and may affect the performance of the product.

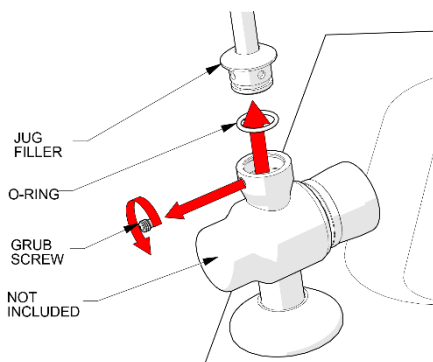

1. Remove existing jug filler


- Isolate mains water.
- Using a hex key, remove the grub screw on the existing filler.
- Once the grub screw has been removed, pull the filler assembly up to remove.
- Ensure the existing outlet is free of debris before installing the new filler.

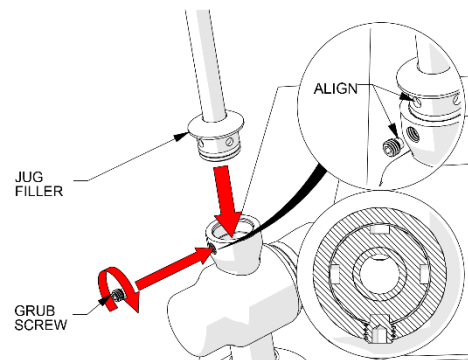

2. Fit new jug filler

- Fit supplied O-Ring to the filler inlet.
- Insert the filler assembly into the existing outlet.
- Ensure the filler inlet sits flush with the outlet.
- Once the new filler has been inserted, rotate the filler to the desired position.
- Line up the position marker on the filler inlet with the grub screw hole in the outlet.
- Using a hex key, install the new supplied grub screw.

Note: We recommend a small amount of an approved silicone grease is used on the o-ring before assembly to ensure ease of fitment.

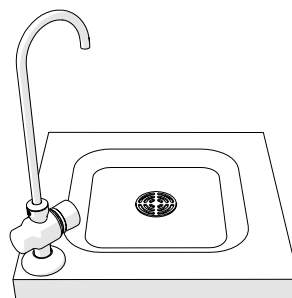

3. Test

- Check for leaks and test for correct operation.



TROUBLESHOOTING (Complete Unit)		
PROBLEM	CAUSE	RECTIFICATION
Leaks	Incorrectly installed.	Follow the installation instructions and ensure the o-ring is correctly installed and the inlet sits flush on the outlet. Check for debris in the outlet.
Spout still rotates	Grub screw incorrectly installed.	Ensure the spout inlet position hole is lined up with the outlet grub screw hole. Re-install grub screw. (See installation step 2)
Water is not flowing from bottle filler	Water is turned off	Turn on water
Inconsistent flow	Blocked top assembly	Remove top assembly and clean.

WARRANTY

The warranty set forth herein is given expressly and is the only warranty given by the Galvin Engineering Pty Ltd. With respect to the product, Galvin Engineering Pty Ltd makes no other warranties, express or implied. Galvin Engineering Pty. Ltd. hereby specifically disclaims all other warranties, express or implied, including but not limited to the implied warranties of merchantability and fitness for a particular purpose.

Galvin Engineering Pty Ltd products are covered under our manufacturer's warranty available for download from www.galvinengineering.com.au Galvin Engineering Pty Ltd expressly warrants that the product is free from operational defects in workmanship and materials for the warranty period as shown on the schedule in the manufacturer's warranty. During the warranty period, Galvin Engineering will replace or repair any defective products manufactured by Galvin Engineering without charge, so long as the terms of the Manufacturer's warranty are complied with.

The remedy described in the first paragraph of this warranty shall constitute the sole and exclusive remedy for breach of warranty, and Galvin Engineering Pty Ltd shall not be responsible for any incidental, special or consequential damages, including without limitation, lost profits or the cost of repairing or replacing other property which is damaged if this product does not work properly, other costs resulting from labour charges, delays, vandalism, negligence, fouling caused by foreign material, damage from adverse water conditions, chemical, electrical or any other circumstances over which Galvin Engineering has no control. This warranty shall be invalidated by any abuse, misuse, misapplication, improper installation or improper maintenance or alteration of the product.

